


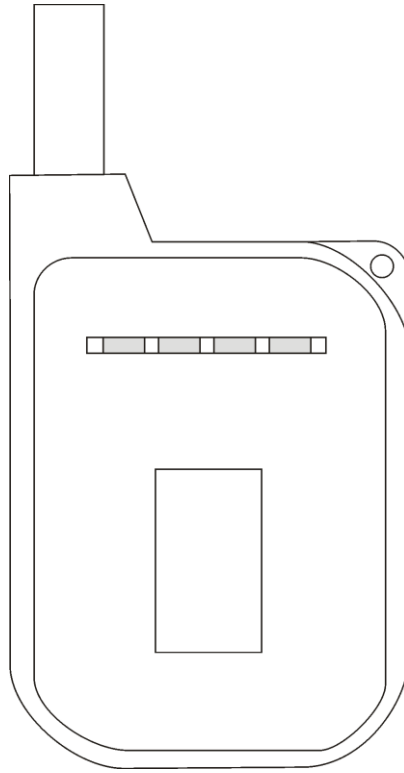

Portable Alcohol Detector user's Guide

Warning (Please read this manual carefully before use)

- **This device is intended for use only by persons aged 20 years and above (in accordance with the law).**
- This device is designed solely for preliminary self-assessment of breath alcohol concentration and has no legal validity.
- The breath alcohol measurement results provided by the police or government authorities shall be deemed final.
- Any actions taken, whether directly or indirectly, are the sole responsibility of the user. The manufacturer and distributor assume no liability.
- This device is subject to and operated in strict compliance with the laws of Thailand.


Table of contents

1, Operation steps -----	3
1.1 Stand-alone test steps -----	3
1.2 Record query and setting operation -----	4
1.3 Connecting to the MAOPAO Application -----	5
1.4 Screen display, indicator light description -----	7
1.5 Charging instructions -----	7
2, Precautions for use-----	7
2.1 Important reminder -----	7
2.2 The influence of alcohol on the human body -----	7
2.3 Alcohol is a chemical -----	7
2.4 How does alcohol affect our body? -----	7
2.5 How does alcohol affect our driving? -----	8
3, Troubleshooting -----	9
4, Disclaimer -----	9
5, The name and content of harmful substances in the product -----	9
6, Service and Warranty -----	10
7, Basic parameters -----	10

Thank you for choosing this product!

H3 Portable Alcohol Detector is a professional alcohol screening equipment, which is used to detect the concentration of alcohol in the breath. H3 uses a high-precision electrochemical sensor to perceive and indicate the approximate blood alcohol content of the subject, and synchronizes the test results by through Bluetooth for professional interpretation of the test results.

Please read this manual completely and become familiar with the H3 Portable Breathalyzer before starting the test.

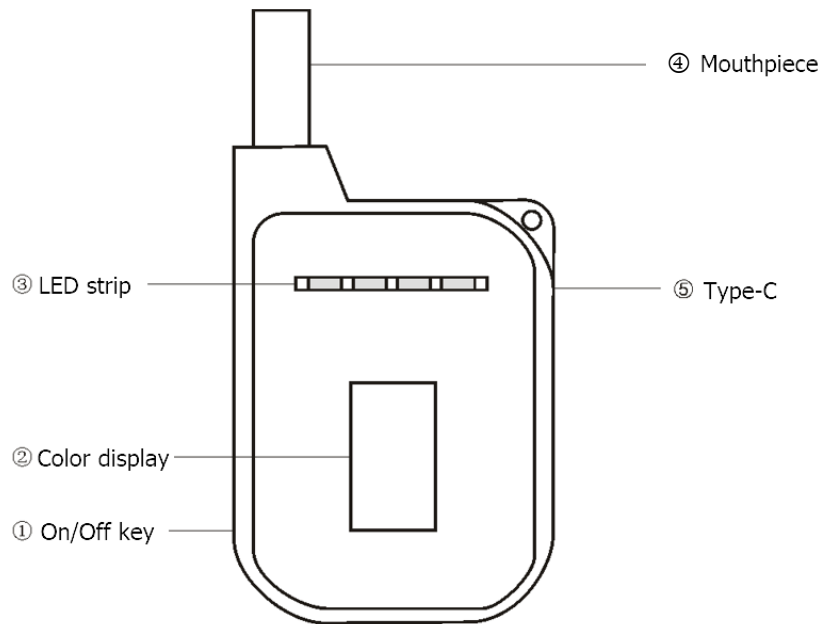

1, Operation steps:

1.1 Stand-alone test steps:

Step 1: Press and hold the [Power button] for more than 2 seconds to turn on the device.

Step 2: Insert the mouthpiece into the reserved hole of the device.

Step 3: Short press the [power button] to enter the blowing interface

Step 4: Start to take a deep breath, aim at the blowing port and blow continuously for 3 seconds, there will be a vibration reminder after the blowing is started, and the vibration will stop after 3 seconds of blowing. If the blowing time is less than 3 seconds or is interrupted in the middle, the device will prompt that the blowing is interrupted and enter the blowing stage again.

Step 5: After blowing air successfully, the device enters the data analysis state.

Step 6: After the data analysis, the test results are displayed as per description list 1.3 (below)

Step 7: Short press the [Power button] to return to the main interface and prepare for the next test.

Step 8: At any stage, long press the [power button] to shut down the device, or stay for 30 seconds, and the device will automatically shut down

1.2 Record query and setting operation

Step 1: Press and hold the [power button] for more than 2 seconds to turn on the machine;

Step 2: Double-click the button on the main interface to enter the menu interface;



Step 3: After selecting [1, record], double-click the button to enter the record query interface,

Step 4: Click the button to view the historical test records, long press the button to return;




Step 5: Click to select [2, Settings] in the menu interface, double-click to enter the password input screen






Step 6: Click to enter the password : 909 , Note: Double-click to confirm when entering the password;

Step 7: Enter the correct password to enter the setting menu;

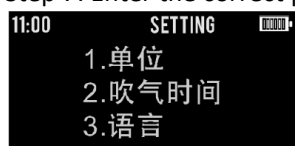

Step 8: Select the corresponding item to perform the following setting operations

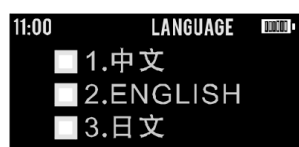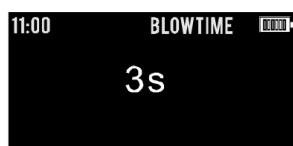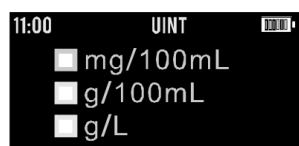


Note: In various operations,
single-clicking the button is for moving the cursor or switching options,
double-clicking the button is for selection,
long-pressing the button is for returning operation.

1.3 Connecting the Device to the MAOPAO Application

Step 1: Go to the Google Play Store or Apple App Store and search for “MAOPAO.”

Step 2: Download and install the MAOPAO application on your mobile phone.

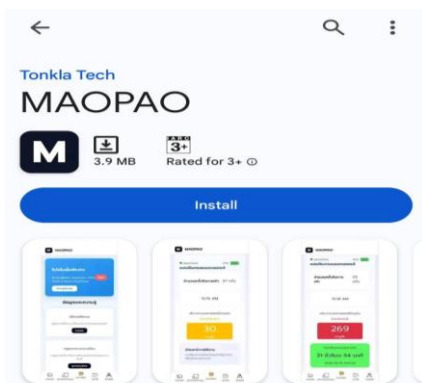


Step 3: Log in by entering your email address and password.

If you do not have an account yet, tap “Create Account” at the bottom of the screen.

Step 4: To create a new account, enter your username, email address, and password.

Step 5: Read and accept the Privacy Policy and Terms & Conditions, then tap “Register.”

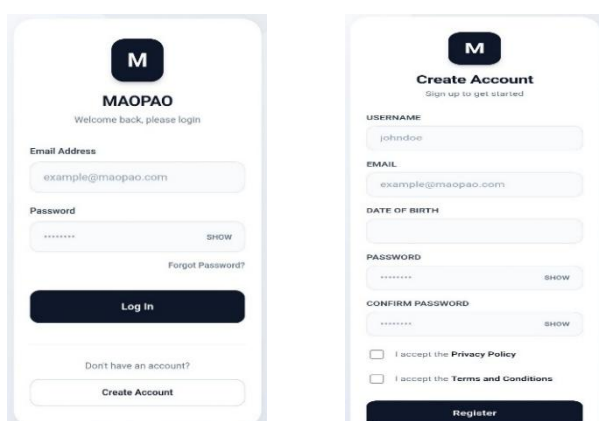

Step 6: Turn on the alcohol breathalyzer device.

Step 7: In the MAOPAO application, go to the “Your Device” menu.


The Bluetooth name “MAOPAO” will appear. Tap “Connect.”



Step 8: To start the alcohol test : In the MAOPAO application, go to the “Test” menu.
On the device, press the power button once to begin the alcohol measurement process. Turn on the alcohol breathalyzer device.


Step 9: Blow steadily into the alcohol breathalyzer until the device stops vibrating.

Step 10: In the MAOPAO, under the “Test” menu, the alcohol test result will be displayed.

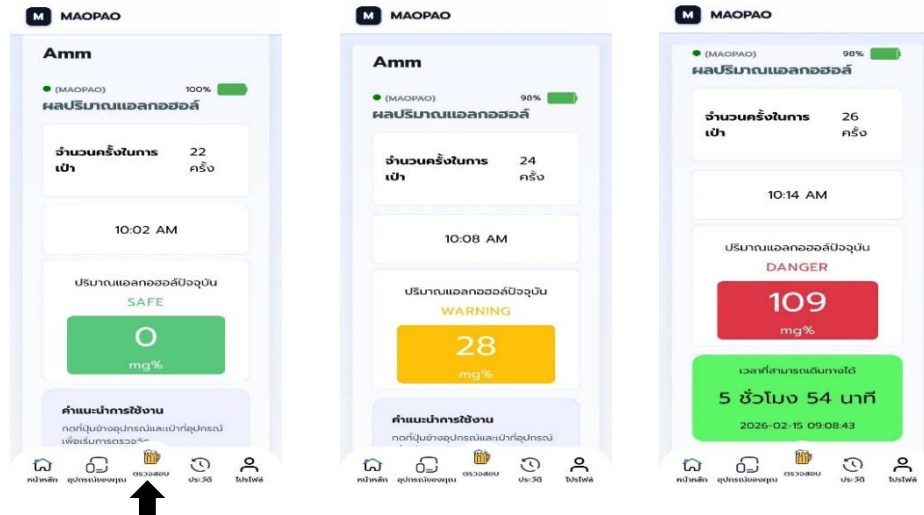

Step 11: Go to the “History” menu in the MAOPAO application.

The application will automatically sync and import all test results from the alcohol breathalyzer device into the app.

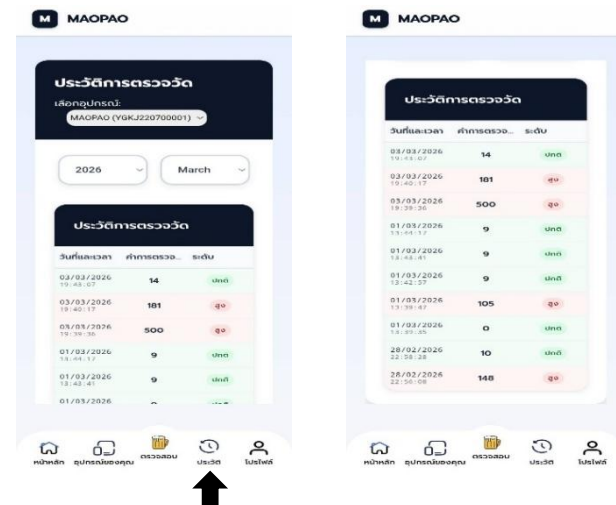

The MAOPAO application can be downloaded from
Enter “MAOPAO” in the search bar.

- Play Store
- Apple Store

1.4 Screen display and indicator light description:

Green indicator light strip: test result between 0 mg – 19 mg/100ml (drinking);

Yellow indicator lights: test results between 20 mg – 49 mg/100ml (drinking);

Red indicator light strip: test result greater than 50 mg/100ml (drunk).

1.5 Charging instructions:

The ALCOHOL H3 intelligent alcohol detector has a built-in large-capacity battery, which can provide you with a standby time of up to 1 month after being fully charged.

The ALCOHOL H3 intelligent alcohol detector adopts USB Type-C standard charging interface, which has the obvious advantages of strong compatibility and fast charging speed. You can use a Type-C 5V charging adapter or power bank that meets national standards to charge the ALCOHOL H3 smart alcohol detector, but charging with an inferior charging adapter may cause product failure and damage.

2, Precautions for use

2.1 Important reminder!

In order to obtain the most accurate results, do not smoke, eat or drink 20 minutes before the test. This is the general principle of all breath alcohol detectors, not unique to this product. The main reason is that if you have just finished drinking, the residual alcohol content in your mouth is very high, which will cause the test result to be seriously inflated.

2.2 The influence of alcohol on the human body

Alcohol is absorbed into the bloodstream from the mouth, throat, stomach and intestines. Alcohol ingested by humans is detected in exhaled breath because it is present in the blood. As the blood travels through the lungs, the alcohol in the blood travels across the membranes of the air sacs (alveoli) in the lungs and into the alveoli. Alcohol concentration in alveolar air is directly related to blood alcohol concentration. As the alveolar air is exhaled, a breath alcohol testing device can detect alcohol in it.

The breath alcohol concentration correlates with the concentration in the blood, so by measuring the concentration of alcohol in the breath it is possible to determine an individual's blood alcohol concentration. The ratio of breath alcohol to blood alcohol is generally 2,000 : 1. Therefore, the alcohol content in 2,000 ml of alveolar air is about the same as the alcohol content in 1 ml of blood.

2.3 Alcohol is a chemical

Alcohol is the chemical (ethanol) produced by the fermentation of grapes or grains. Alcohol is absorbed directly into your bloodstream, where it travels to every organ in your body. The liver clears alcohol from the blood at a constant rate, and nothing you eat or drink can speed up this process. Your liver does this by oxidizing alcohol (turning it into water and carbon dioxide). Coffee food or any other "remedy" will not wake you up, only time will do.

2.4 How does alcohol affect our body?

Alcohol is a depressant. It has a relaxing effect on the muscles of your body, causing your eye muscles to relax, loss of focus, blurred vision, and even double vision; slowing brain activity, judgment, reflexes, and coordination are all negatively affected

Some vision impairments that occur after drinking alcohol include:

- Narrowing of field of view; Reduced depth perception;
- Reduced vision in the dark
- Increased sensitivity to glare, making eyes take longer to readjust from glare.

Some mental disorders may occur when you drink alcohol, including:

- Reduced awareness of danger; Difficulty making decisions;
- Slow reaction; become overconfident and reckless;
- Reduced balance;
- Impaired judgment

2.5 How does alcohol affect our driving?

No matter how we emphasize the danger of drunk driving, it is impossible to overemphasize that eyesight and brain are the most important guarantees for safe driving, and serious or fatal collisions are likely to occur while drunk driving.

CAUTION: Do not use the ALCOHOL H3 intelligent alcohol detector as a tool to determine whether you can operate a motor vehicle or equipment or perform any other dangerous act. Driving under the influence of alcohol is strictly prohibited. After drinking, be sure to designate a driver.

Effects of Different Blood Alcohol Concentrations

Blood alcohol concentration (Unit : mg/100mL)	Affecting Effects
20 – 30	Excitement, loss of shyness.
40 – 60	There is a sense of well-being, physical relaxation, low inhibition and a sense of warmth. There are some minor impairments in logical reasoning ability and memory of the brain. Reduced alertness. This level of intoxication may impair driving skills.
70 – 90	Slight impairments in balance, speech, vision, reaction time, and hearing. Excitement, judgment, and self-control are reduced. Caution, sanity and memory are impaired. At this level of intoxication, driving skills are impaired.
100 – 120	Significantly impaired motor coordination, loss of good judgment. Speech may be slurred. Balance, vision, reaction time and hearing can all be impaired.
130 – 150	Severe movement impairment and lack of body control. Blurred vision, loss of balance. Euphoria diminishes and anxiety sets in.
160 – 200	Anxiety dominates, accompanied by nausea and other physical discomfort.
200 – 300	Need help walking, confusion, with nausea and vomiting
Greater Than 300	Loss of consciousness, coma, possible death from respiratory arrest.

However, if you have consumed alcohol, your driving skills may be impaired. Drinking and driving is never safe.

3, Troubleshooting:

Symptoms	Solution
battery is low	Charge your device in time
There is no response when blowing air when entering the measurement	The blowing pipe is blocked by foreign objects or saliva enters, clean the pipe with a wet cotton swab.
alcohol test no value	Observe whether the blowing pipe is blocked. After cleaning, if there is still no value measured, the sensor may be damaged.
no alcohol test value	Exclude whether there are sugar and alcohol residues in the mouth, whether there is smoking, or pay attention to the food or drink you drink. If the above phenomenon is excluded and there is still a value, it needs to be returned to the factory for recalibration.

4, Disclaimer:

The manufacturer makes and distributor no warranty, express or implied, regarding the mental or physical function of the user of this product, or the ability to determine whether or to what extent it may be affected by blood alcohol. **MANUFACTURER AND DISTRIBUTOR EXPRESSLY DISCLAIMS ANY LIABILITY FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE UNDER ANY LEGAL THEORY.** Any action based on readings from this product should be at the subject's or user's own risk. The manufacturer and distributor accepts no responsibility for the consequences of subjects using this product and of subjects who are later shown to have been impaired by alcohol or whose judgment or any mental or physical function was impaired by alcohol

The correlation between breath alcohol content and blood alcohol concentration depends on many variables, including environmental factors and the health status of the subjects. A low alcohol reading/short time to sobriety does not mean that the subject's physical or mental performance or judgment (including reaction time) is capable of responding to an emergency situation.

5. The name and content of harmful substances in the product

Part Name	Harmful Substance					
	Lead Pb	Mercury Hg	cadmium cd	Hexavalent Ming (Cr(VI))	Polyoxybi phenyl (PBB)	Diphenyl ether (PBDE)
Plastic parts	0	0	0	0	0	0
Electrical circuit components	0	0	0	0	0	0
Charging Cable	0	0	0	0	0	0

This table is prepared according to the provisions of SJ/T11364

0 : Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

X : Indicates that the content of toxic and hazardous substances in at least one homogeneous material of this part exceeds the limit requirement specified in GB/T26572.

This product complies with EU RoHS2.0 Directive (2011/65/EU).

The 10-year icon refers to the "environmentally friendly effective use period", not the product quality guarantee period. "Environmentally friendly effective use period" means that all electronic products will be required to be used within this effective period, and our company will no longer be responsible for product quality if there are safety risks beyond the safe use period.

6, Service and Warranty

The after-sales service of ALCOHOL H3 intelligent alcohol detector products is strictly based Compliance on the relevant Laws of Thailand. The service content is as follows:

Warranty Policy

1. Return the product have blocker or not standard within 7 days from the day after the receipt (e-commerce purchase channel), and the logistics costs shall be borne by the user;
2. If the product has a performance failure listed in the "Product Performance Failure Table" or is confirmed to be the product have blocker or not standard by the company's after-sales technical department, the product failure and damage will be confirmed by testing, and the following services can be enjoyed free of charge.

Reminder: Since packing boxes are required to ensure product transportation safety during transportation, it is recommended that you keep the packing box for at least 30 days from the date of receipt.

Non-warranty policy

1. Damage caused by misuse, abuse, neglect, liquid ingress, incorrect use, modification or unauthorized repair;
2. Normal wear and tear, including cracks, scratches, abrasions, discoloration or fading;
3. The product information recorded on the warranty certificate does not match the physical identification of the product or has been altered;
4. Does not meet the performance listed in the "Product Performance Failure Table" failure conditions;
5. Damage caused by force majeure;
6. It has exceeded the validity period of the guarantees;
7. The product and its accessories have performance failures listed in the "Product Performance Failure Table" due to human factors.

7, Basic parameters

Product Name: Portable Alcohol Tester

Product model: H3

Sensor: fuel cell type alcohol sensor (electrochemical)

Blowing time: 3 seconds

Response time: 1 - 15 seconds

Measuring range: 0 - 400mg/100mL

Product size: 42*70*11mm

Power supply battery: 300mAh

Charging method: Type-CDC5V/1A

Charging time: 1H

Shell material: ABS engineering plastics

Display: 0.96' TFT color display

Key operation: single key operation

Bluetooth wireless communication: BLE5.0

Use environment: temperature: 0-45 degrees; humidity: 35 - 85%

Packing list :

Alcohol detector

One TYPE-C USB charging cable

5 mouthpieces

A manual